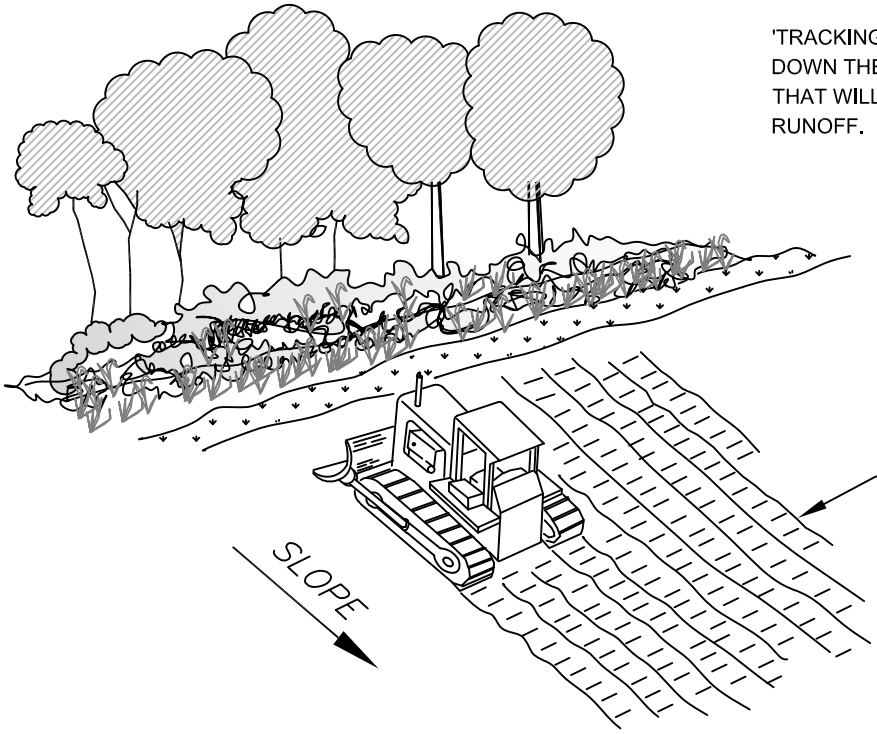

TRACKING

NOTES:

1) ROUGHENING METHODS INCLUDE BENCHING, GROOVING, CONTOUR FURROWS AND TRACKING. BENCHING INVOLVES CUTTING STAIR STEPS PERPENDICULAR TO THE SLOPE. CONTOUR FURROWS ARE CREATED BY CUTTING GROOVES PERPENDICULAR TO THE SLOPE. TRACKING INVOLVES RUNNING MACHINERY UP AND DOWN THE SLOPE.
2) AREAS THAT WILL NOT BE STABILIZED IMMEDIATELY MAY BE ROUGHENED TO REDUCE RUNOFF VELOCITY UNTIL SEEDING TAKES PLACE.
3) ALL SLOPES STEEPER THAN 3H:1V AND GREATER THAN 5 VERTICAL FEET REQUIRE SURFACE ROUGHENING TO A DEPTH OF 2 TO 4 INCHES PRIOR TO SEEDING.
4) SLOPES WHERE MOWING IS PLANNED SHOULD NOT BE EXCESSIVELY ROUGHENED.
5) AREAS GRADED IN THIS MANNER SHALL BE SEEDED WITHIN 30 DAYS.
6) REFER TO BMP C130 IN VOLUME II OF THE STORMWATER MANAGEMENT MANUAL FOR WESTERN WASHINGTON FOR MORE INFORMATION.

CDID #1
CONSOLIDATED DIKING IMPROVEMENT DISTRICT NO. 1

REV	ISSUE	DWG	DES	CHK	APP
7/2020	new standard	TC	ANB	ANB	ANB

SURFACE ROUGHENING
STANDARD INSTALLATION DETAIL

DATE: JULY 2020
DESIGN: ANB
DRAWN: TC

DRAWING NO.
EC-2
1 of 1