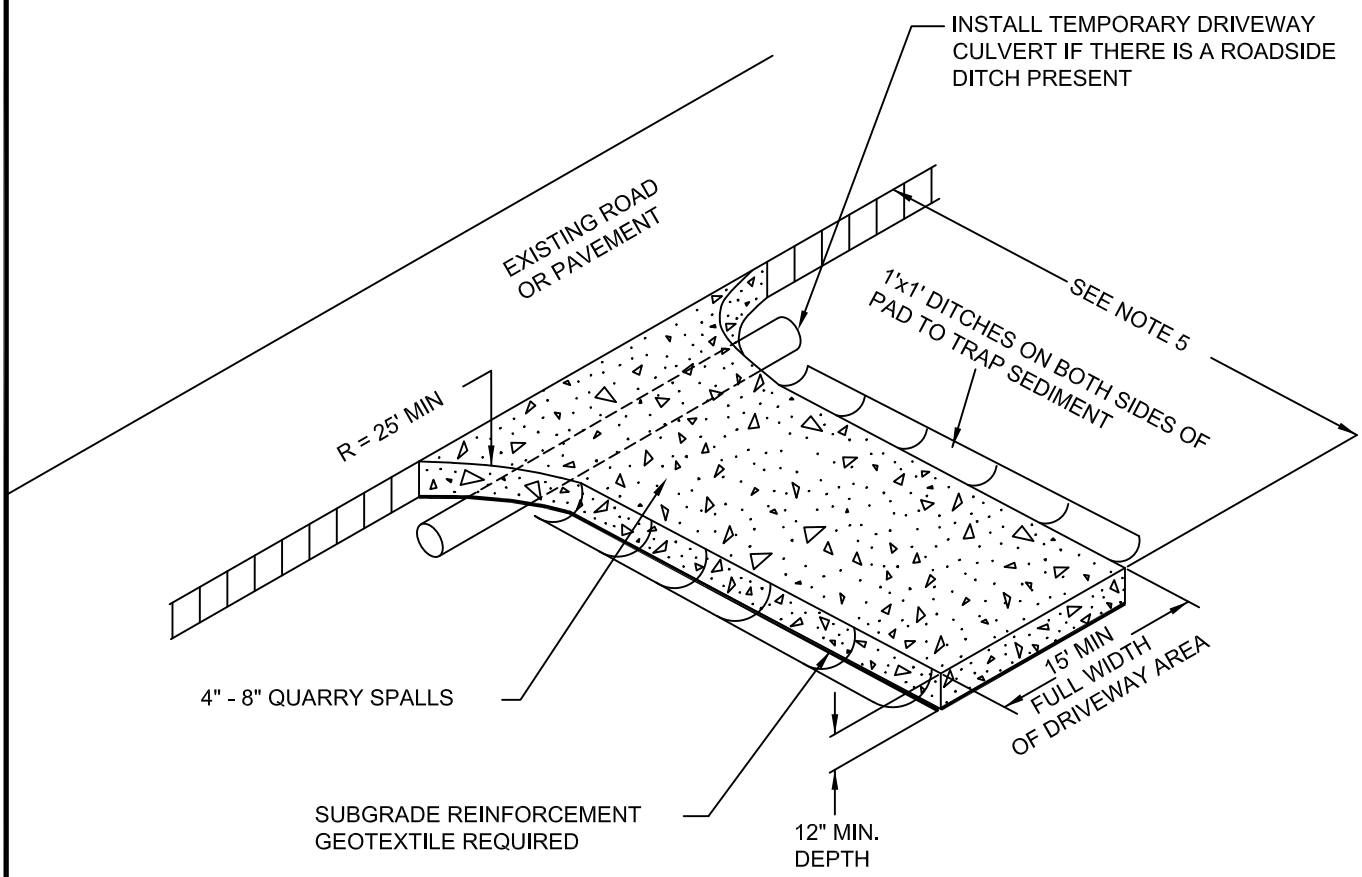

NOTES:

1) INSTALL GEOTEXTILE FABRIC TO PREVENT SUB-SOIL PUMPING.
2) TOP DRESS THE PAD WITH CLEAN 3" ROCK WHEN THE CONSTRUCTION ENTRANCE BECOMES CLOGGED WITH SEDIMENT.
3) ANY SEDIMENT TRACKED FROM THE SITE ONTO THE STREET SHALL BE CLEANED UP IMMEDIATELY. PRESSURE WASHING NOT ALLOWED. SWEEPING IS REQUIRED.
4) REFER TO BMP C105 IN VOLUME II OF THE STORMWATER MANAGEMENT MANUAL FOR WESTERN WASHINGTON FOR MORE INFORMATION.
5) 100' FOR SITES GREATER THAN 1 ACRE OF LAND DISTURBED. 50' FOR SITES WITH LESS THAN 1 ACRE OF LAND DISTURBED.

CDID #1
CONSOLIDATED DIKING IMPROVEMENT DISTRICT NO. 1

REV	ISSUE	DWG	DES	CHK	APP
7/2020	new standard	TC	ANB	ANB	ANB

STABILIZED CONSTRUCTION ENTRANCE
STANDARD INSTALLATION DETAIL

DATE: AUG 2020
DESIGN: ANB
DRAWN: TC

DRAWING NO.
EC-3
1 of 1